WEIMAN

TV-8800

INSTRUCTION MANUAL

~100V 50-60Hz 60W

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Catalogue/Preface/Attachment

Contents

Preface ——— 1
Accessories ——— 1
Main features ——— 1
Main structure/Installation ——— 2-4
Safety affairs/remote control/discs ——— 5
iPod operation ——— 6-7
Remote control function ——— 8-10
Panel/Back board illustration ——— 11
System connection illustration ——— 12-13
System setup ——— 13-17
JPEG/MPEG-4/USB/ CARD/AUX ——— 18
Trouble shooting guide/ Technical specifications/Remarks ——— 19

Preface

To customers:
Thank you for buying this component player! We suggest that you should read the manual before connecting the system to a power supply so as to guarantee the best features of the product and your video and audio enjoyment.
Please keep the manual and packaging carefully for later reference.
If there is problem during using the system,please contact our customer service department.

Accessories

Please check that the following accessories are enclosed in the package.

1.Remote control

2.User's manual

3.Speaker cables

4. AV cable

5. iPod bracket

6. Fixed clip

7. Screw

- ◆ The specification in the manual is according to the samples, just for your reference.
- ◆ If the specification design changed, no further notice.

Main features

- Compatible with DVD/CD/MP3/WMA/CD-R/CD-RW/MPEG4/USB/SD/MMC
- Support iPod audip playing video output
- Picture CD readable,digital album browse playing function
- Multi-caption,angle screen picture selection function
- Build-in AC-3 & HDCD decoder
- Intelligent upgrade, age lock and automatic screen protection function
- Digital beam ,coaxial and mix-audio(left/right) output
- Support karaoke function
- Standby clock setting
- Two subwoofer channel power output(2*20W+40W RWS)

Before attempting to connect,operate or adjust this product,please read the instructions completely.Please save this manual.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Main Structure/Installation

Front view

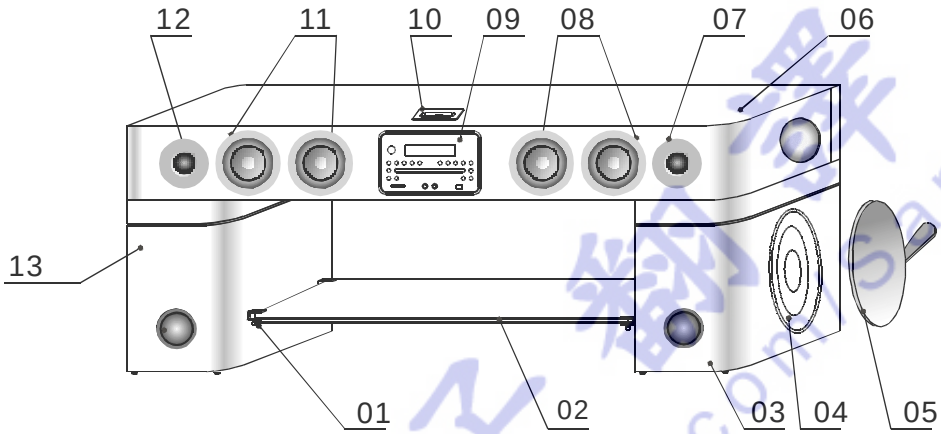

Rear view

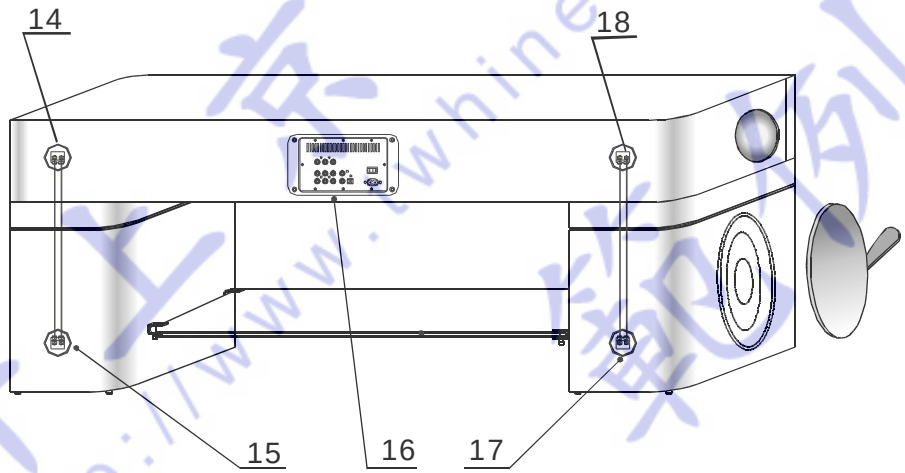

1.Fixed clip for glass	7 Tweeter speaker	13 Left speaker box
2. Glass board	8 Mediant speaker	14 Speaker output socket
3. Right speaker box	9 DVD Panel board	15 Speaker input socket
4. Bass speaker	10 iPod dock	16 Back board
5. Speaker cover	11 Mediant speaker	17 Speaker input socket
6 Main unit box	12 Tweeter speaker	18 Speaker output socket

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Main Structure/Installation

Installation steps:

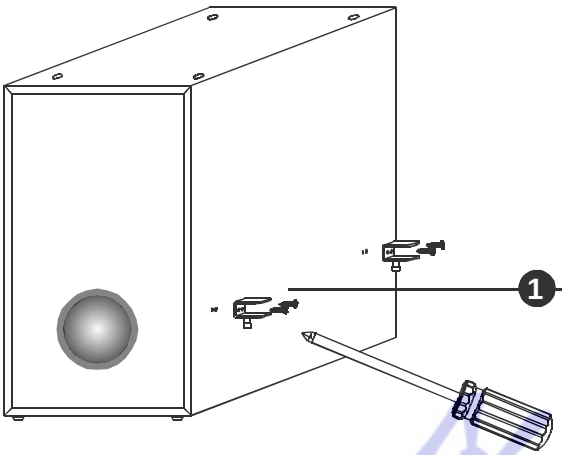

1 Install the four fixed clips to the four holes on the left/right speaker ,and tighten screw by screwdriver.

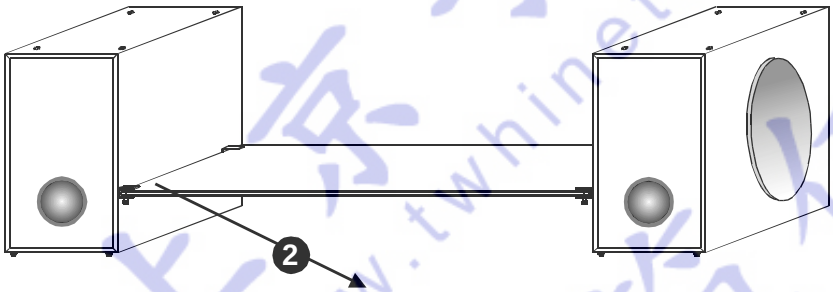

2 Put the glass into the slot of clips.

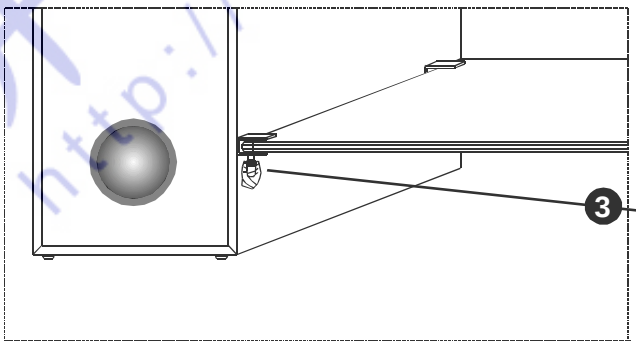

3 Use the screwdriver to drive the four screws properly for fixing the glass.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Main Structure/Installation

Installation steps:

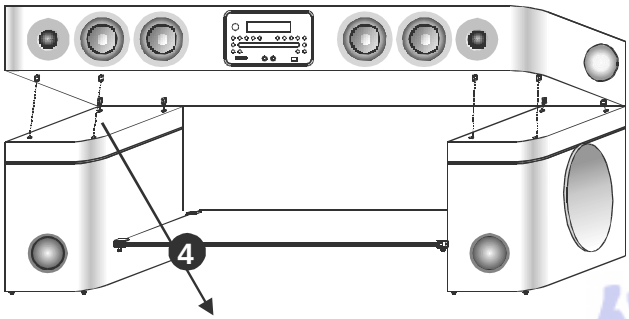

Embed the orientation post (on the bottom of main unit box) in the four holes (on top of left/right speaker).

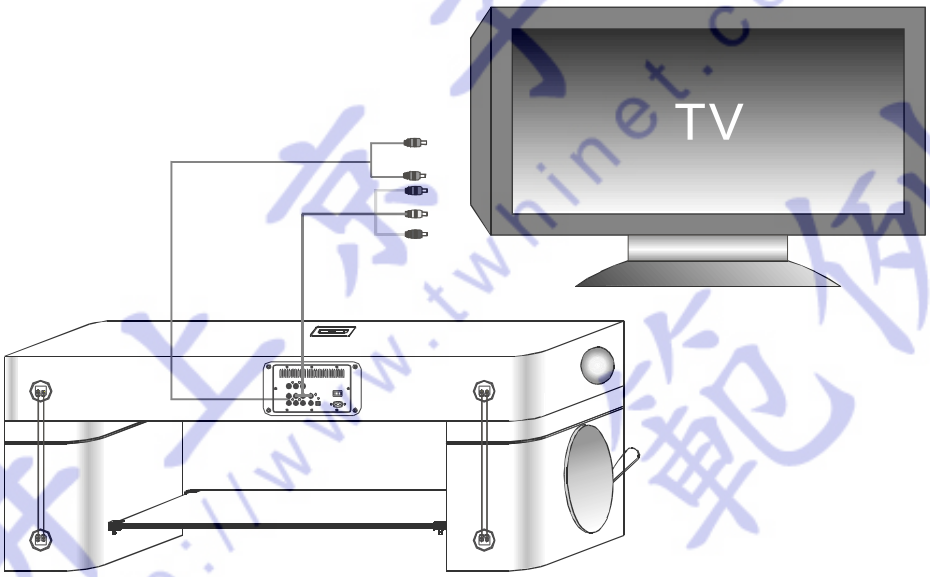

Note:

1. Should be balancedly installed to the place where is convenient for operation and maintainence (should not put aslant).
2. Strictly prohibit to install it to the place where might be affected with damp, tinder or wringing by water.
3. Put gently during transit, must not push it on the ground.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Safety affairs/remote control /discs

Safety Precautions

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lighting flash with an arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to cause an electric shock

The exclamation mark within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this user manual.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
CAUTION: TO PREVENT ELECTRIC SHOCK, MACTCH PSE 2-FLAT PLUG CAREFULLY, FULLY INSERT .
DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

This product contains a low power laser device.

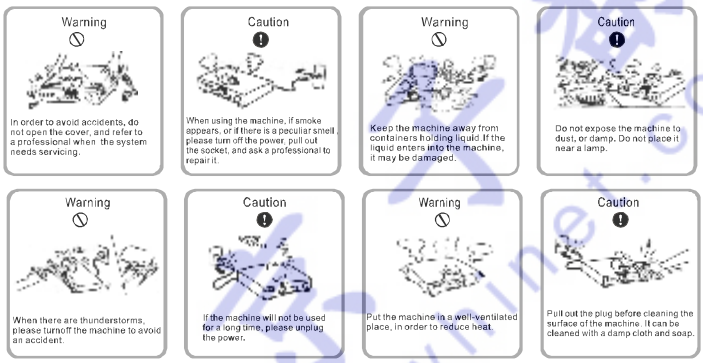
Warning
In order to avoid accidents, do not open the cover, and refer to a professional when the system needs servicing.
Caution
When using the machine, if smoke appears, or if there is a peculiar smell, please turn off the power, pull out the socket, and ask a professional to repair it.
Warning
Keep the machine away from containers holding liquid. If the liquid enters into the machine, it may be damaged.
Caution
Do not expose the machine to dust, or damp. Do not place it near a lamp.
Warning
When there are thunderstorms, please turnoff the machine to avoid an accident.
Caution
If the machine will not be used for a long time, please unplug the power.
Warning
Put the machine in a well-ventilated place, in order to reduce heat.
Caution
Pull out the plug before cleaning the surface of the machine. It can be cleaned with a damp cloth and soap.

1. Remote Control functions and operation.
Open the back cover in the back, put two batteries in (check that they are inserted with the correct polarity) then put the cover on. Aim at the front end of the reception window of the power amplifier, after that, you can operate the system easily with the remote control.

Batteries should be inserted with the correct polarity

2. Remote control maintenance
A. Keep the surface of the remote control and keys clean, because accumulated dust can alter the function of the keys.
B. Do not place the remote control in a damp or rainy place.
C. The batteries of the remote control need to be replaced under the following conditions.
1 Continuous use for more than three months.
2 The distance capacity of the remote control appears to be shortened.
3 The power amplifier responds slowly or has no response when pressed.

3.Disc maintenance & cleaning
After a certain time, the disc will be covered with dust and may become damaged . It is very important to keep discs clean, so please use a cleaning cloth to clean the discs before playing.

Incorrect cleaning

Correct cleaning

Note:
1 Please use a special solution to clean the discs. Do not use any volatile solutions for cleaning, ie, petrol, alcohol, etc.
2 Do not expose discs to high temperatures, direct sunlight or damp as it may cause damage to discs.
3 Protect the discs from fingerprints. Do not use a product which may damage discs.
4 When discs are not in use, always store them in their cases..

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

iPod operation

iPod MANUAL INSTRUCTION

1. " ⏯ " is play/pause key, pressing and holding it for 3-5 seconds, iPod® will enter standby mode, press it again to resume use.
2. " ■ " is stop key.
3. " ⏮ " and " ⏭ " are previous/next track keys, press and hold it for 2-3 seconds to enter to the quick forward/ backward functions. (Or press " ◀◀ " " ▶▶ " keys to choose the quick forward/backward functions directly).
4. "MENU" -after pressing this key, you can use " ▲ " and " ▼ " direction keys to choose the function that you need, then press "ENTER" key.
5. "REPEAT" - when playing disc, press the key to select the desired track to repeat. " " means one track repeating. " " means all tracks repeating.

iPod® OPERATION WITH THE MAIN UNIT

The unit is compatible with all the most popular iPod® models, such as iPod® mini,iPod® nano, iPod® Photo, iPod® Video etc., And as a battery charger for the iPod®.
The unit comes with 6 removable dock adapters. Ensure your iPod® its properly in the dock.
Due to new iPod® models, new dock adapters are subject to availability.

To insert a dock adapter

Select a dock adapter, which comes with the unit for your iPod® Using the correct dock adapter ensures the proper fit for your iPod®

1. Gently press the iPod® dock adapter into the dock at the top of the unit.
2. Carefully place your iPod® into the dock. (The iPod® must not be in acase or "Skin").

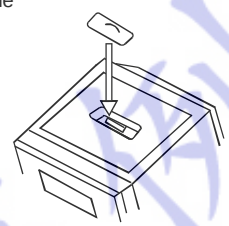

To remove a dock adapter

First remove your iPod®, and then grip the dock adapter and pull gently upwards.

Operating iPod® with the main unit.

1. Press the iPod® button. The display indicates iPod.
2. Select your desired music, photos or videos, etc and play the connected iPod® as usual.
3. You can also select the desired next or previous music tracks by pressing ⏮ / ◀◀ or ▶▶ / ⏭ button repeatedly, and press ▶/⏸ PLAY/ PAUSE to play or pause.
4. Press VOLUME +/- button to adjust to desired sound level.



Note: If you want to watch photos and videos from the iPod®, the video out must be connected to your home TV .

Charging your iPod®.
Note: Please make sure you are using the correct insert for your iPod® and that it is propery docked into the dock adapter. Failure to do so may cause damage to your iPod®.
While your iPod® is docked in the system, it recharges until fully charged. Note that other non-docking iPod® will not charge.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

iPod operation

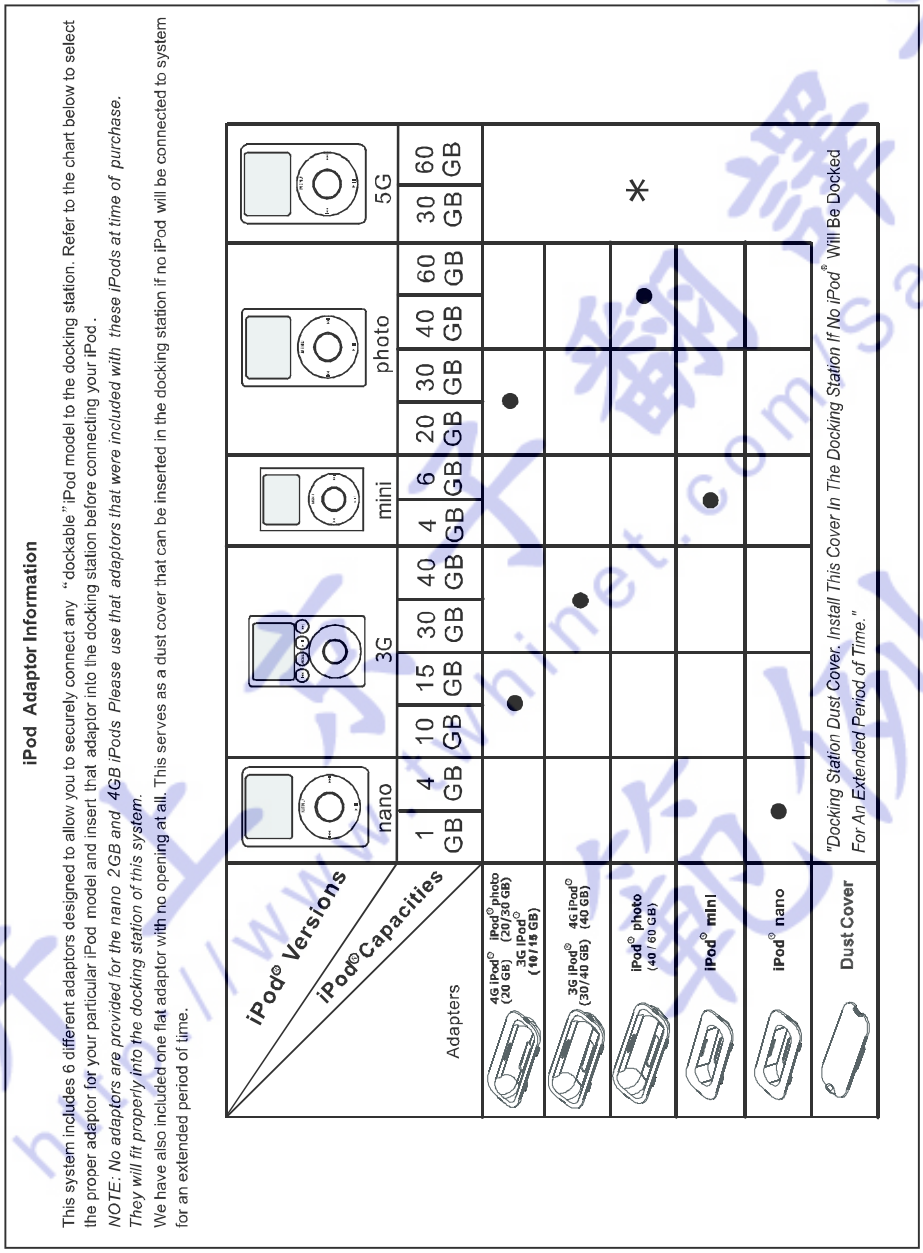

iPod Adaptor Information

This system includes 6 different adaptors designed to allow you to securely connect any "dockable" iPod model to the docking station. Refer to the chart below to select the proper adaptor for your particular iPod model and insert that adaptor into the docking station before connecting your iPod .

NOTE: No adaptors are provided for the nano 2GB and 4GB iPods Please use that adaptors that were included with these iPods at time of purchase. They will fit properly into the docking station of this system.

We have also included one flat adaptor with no opening at all. This serves as a dust cover that can be inserted in the docking station if no iPod will be connected to system for an extended period of time.

iPod® Versions / iPod® Capacities	nano			3G				mini			photo				5G	
Adapters	1 GB	4 GB	10 GB	15 GB	30 GB	40 GB	4 GB	6 GB	20 GB	30 GB	40 GB	60 GB	30 GB	60 GB
4G iPod® (20 GB) iPod® photo (20/30 GB) 3G iPod® (10/15 GB)			●						●					
3G iPod® (30/40 GB) 4G iPod® (40 GB)					●									
iPod® photo (40 / 60 GB)											●			
iPod® mini								●						
iPod® nano		●												
Dust Cover	*"Docking Station Dust Cover. Install This Cover In The Docking Station If No iPod® Will Be Docked For An Extended Period of Time."*													

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Remote control function

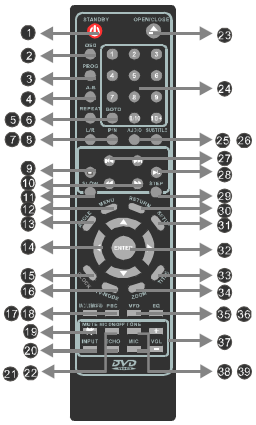

1. STANDBY
2. OSD
3. PROGRAMME
4. A-B REPEAT
5. REPEAT
6. GOTO
7. L/R
8. P/N
9. STOP
10. QUICK FORWARD/ BACKWARD
11. SLOW
12. MENU
13. ANGLE
14. DIRECTION KEYS
15. CLOCK
16. TV-MODE
17. DVD/USB/CARD
18. PBC
19. MUTE
20. INPUT
21. MIC ON/OFF
22. ECHO SELECTION
23. OPEN/CLOSE
24. NUMERIC KEYS
25. AUDIO
26. SUBTITLE
27. PREVIOUS/NEXT TRACK
28. PLAY/PAUSE
29. STEP
30. RETURN
31. SETUP
32. ENTER
33. TITLE
34. ZOOM
35. VFD
36. EQ
37. VOLUME+/-
38. TONE
39. MIC VOLUME

1 STANDBY

Press the key when you are not using the machine, in order to save energy.

2 OSD-SCREEN DISPLAY

Press OSD key, the screen will show current situation, time, remaining time and other functions.

3 PROG

Press PROG, the screen will show the programme menu. The machine can program a sequence of 20 tracks (CD/VCD) or chapters (DVD).After entering the PROG menu, the cursor will stay at No.1 place, input the track (CD/VCD) or chapter (DVD) number that you want to play first by pressing the numeric Key (0-9).Then press the direction key to move cursor to the place of No.2, the operation is the same as above. If you make a mistake or if you want to change the order of the programme, you can move the cursor to the place that you want to revise by pressing the direction key and input new numbers. After setting,press "start" to start program playing. Press PROG and exit the PROG picture, and begins to play normally.

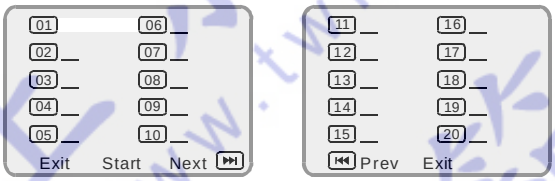

Press PROG key when playing MP3/MP4/JPEG files, you can choose the files showing mode: Filelist, Folder.

4 A-B REPEAT

A-B repeat function that lets you set your favourite scenes for instant repeat:
1. Press the key at the point where you want the repeat to start;
2. Press the key again at the point you want to repeat, then the function will be activated;
3. Under A-B repeat function, press this key again, the function will be cancelled.

5 REPEAT

If the REPEAT key is pressed when the machine is playing, the track will repeat, if you want the whole program to repeat, press the REPEAT key again.

6 GOTO

The GOTO button allows you to move to the place of your choice. After pressing the GOTO button, enter the track, title of chapter of your choice using the number keypad, or enter the exact hours, minutes and seconds corresponding to the place where you wish to start playback.

DVD	TT	01/04 CH	019/ 20	00:00:00
CD	TRK	08/18		00:00:00

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Remote control function

7 L/R
When playing disc,press this button to choose stereo/Left/Right output.

8 P/N-MODE SELECT
Press the key to select the PAL, NTSC,AUTO.

9 STOP
In normal playing state, press this button to go to stop mode, the TV screen will show the start logo. As some disc, the player can recall the location where stopped, such as DVD. Press STOP twice to stop completely.

10 QUICK FORWARD/BACKWARD
Press the key, you can choose 2X,4X,8X,16X,32X five kinds of speed to play(no sound) ,press PAUSE key to recover the normal speed.

11 SLOW
Press this key when playing a DVD/VCD disc, it will play at 1/2,1/4,1/8,1/16 of the normal speed.
Then press the PAUSE key to return to normal playback.

12 MENU
Press this key (only available during DVD playback) and the main menu will appear. Press the direction keys to choose a program and then confirm.

13 ANGLE
Some DVD discs can be played at different angles, please use this key to select any angle to enjoy the program.

14 DIRECTION KEYS(UP/DOWN/LEFT/RIGHT)
Being in Subtitle / Menu/Setup states, press these keys to select the program or items what you need.

15 CLOCK
When the machine is in standby mode, use the direction keys to adjust the time.

16 TV-MODE
During DVD playback, press this key to choose among the following options:S-VIDEO, YUV.

17 DVD/USB/CARD
Being in DVD mode, you can switch to DVD/USB/CARD mode by pressing DVD/USB/CARD key , and turns to play automatically after 5-10 seconds.

18 PBC
During playback of a disc that is more advanced than the VCD1.1 format, press this key to display the PBC menu on the screen. You can then choose the play mode. Press it again to cancel the function. You can only choose the program using the number keys or with the skip forward/ backward keys.

19 MUTE
When playing a disc, press mute key to cancel audio output, press it again to cancel the function.

20 INPUT
Press the key when the machine is turned on, to change the input: DVD/AUX/iPod.

21 MIC ON/OFF
Press this key to turn on or off the microphone.

22 ECHO
Being MIC ON state, Press this key, then press vol+/- key to adjust the karaoke echo effect.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Remote control function

23 OPEN/CLOSE

Press this key to open or close the CD tray.

Note: 1.The printed side of the disc should face up. The machine will play after the tray is closed.

2. Press the key when playing disc, the CD tray will be open after 5-10 seconds for resetting the laser.

24 NUMERIC KEYPAD(0-9)

Press the number 0-9 to directly select a program up to 10 inclusive; if the number of the program exceeds 10, you can press 10+ key , then press the other numbers.

25 AUDIO

Press the key repeatedly to choose different languages that are recorded on the disc.

26 SUBTITLE

The machine supports many languages, press the key repeatedly to select different one of them.

27 PREVIOUS/NEXT TRACK

Press them when the machine is playing disc, it will stop the current program and switch to previous/next program.

28 PLAY/PAUSE

In playback mode, press this key to change to play or pause mode.

29 STEP

Press this key to view a sequence image by image.

30 RETURN

Press this key when playing disc to return to the title menu.

31 SETUP

Press this key to enter general setup, audio setup, dolby setup, video setup and preference setup.

Follow these step by step instructions for use:

Press SETUP key during playback, and use the direction keys to navigate within the menu and the screen will display the different menus which enable you to program the machine. After you have made the adjustments, press the SETUP key to exit this menu,

Note: You can also set up the system while the disc is not playing.

32 ENTER

Press this key to confirm selections in the menu displayed on the screen.

33 TITLE

Press this key to return to the title menu of the DVD disc.

34 ZOOM

Press this key when playing a DVD/VCD, the original picture will be increased by 2x,3x,4x.

35 VFD

Press this key to adjust the balance (up or down).

36 EQ

When the machine is switched on, press EQ key to change the balance mode.

Options: JAZZ, CLASSIC,ROCK, POPS, EQ OFF.

37 VOLUME +/-

Press the keys to adjust the volume.

38 Tone

Press the key to select the main volume、bass、treble and subwoofer volume mode, then press vol+/- key to adjust the effect.

39 Microphone volume

Being MIC ON state, press this key, then press vol+/- key to adjust the microphone volume.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Panel/Back board illustration

Panel function illustration

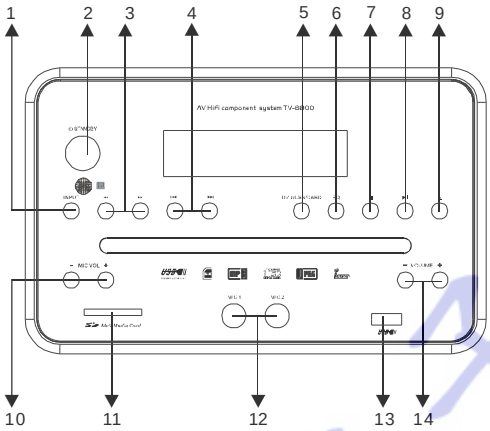

1.INPUT	Channel conversion
2.⏻STANDBY	Standby
3. ◂◂ ▸▸	QUICK FORWARD/BACKWARD
4. ⏮ ⏭	PREVIOUS/NEXT TRACK
5.DVD/USB/CARD	DVD/USB/CARD
6.EQ	EQ balance mode
7. ■	STOP
8. ⏯	PLAY/PAUSE
9. ⏏	Open/close
10. - MIC VOL +	Microphone volume
11. SD MultiMedia Card	SD/MMC card slot
12.MIC	Microphone socket
13. USB	USB input
14. - VOLUME+	Main Volume

Back board function illustration

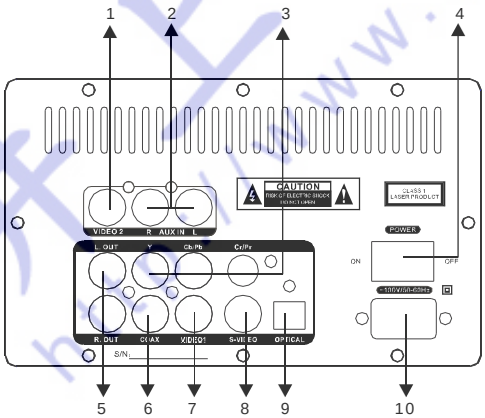

1 VIDEO 2	DVD & iPod video output
2 R AUX IN L	AUX input socket
3 Y Cb/Pb Cr/Pr	Y,Cb,Cr video output socket
4 POWER ON/OFF	Power on/off
5 L. OUT R. OUT	Left/right mix audio output socket
6 COAX	Digital audio coaxial output
7 VIDEO	DVD video output
8 S-VIDEO	S-video video output socket
9 OPTICAL	Digital audio optical output socket
10 ~100V/50-60Hz	Power

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

System connection illustration

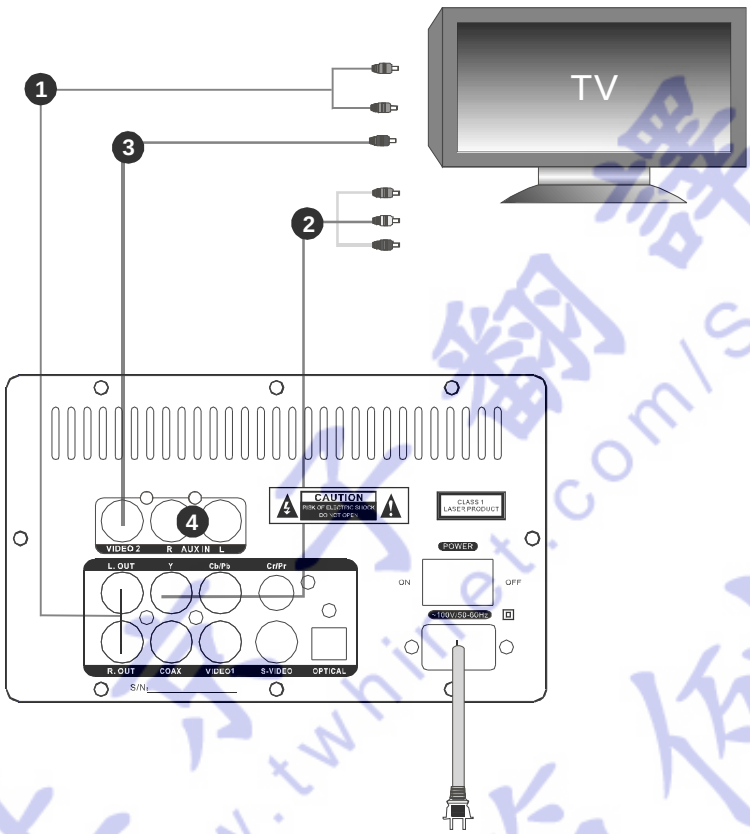

1. Connect with audio signal input socket (audio, RED/WHITE)
2. Connect with Y ,Cb/Pb, Cr/Pr video input socket
3. Connect with DVD video signal input socket
4. AUX input socket

WARNING:DO NOT PLACE SPEAKERS CLOSE TO TV,PLEASE ENSURE TO KEEP AT LEAST 20cm BETWEEN TV AND SPEAKERS.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

System connection illustration

1.Connection with TV

1.1 If your TV only has a VIDEO input socket (yellow socket), please connect the system's VIDEO output socket and the TV's VIDEO input socket with video cable.

1.2 If your TV has an S-VIDEO iutput socket, Please use an S-video cable to connect with this system's S-VIDEO output socket, and the pictures will be much better. When setting the system, please set the Video output as S-VIDEO output.

1.3 If your TV has a Y, Cb, Cr input socket, please use Y, Cb, Cr port cable to connect this system's Y, Cb, Cr output socket with the TV's Y, Cb, Cr input socket to get a high quality picture. When setting the system, please set the Video output method as Y, Cb, Cr output.

1.4 Use the Audio cable to connect the left and right sound channel of TV,then the TV's speaker can be used for audio output.

2. Connection with amplifier

Connection with left/right speakers

Use speaker cables to connect the left and right speakers with the left and right mix audio output socket of this system to enjoy stereo music.

3.Operation steps

3.1 Connect the system as in the above illustration

Turn on the TV, adjust the TV to the AV channel, then press STANDBY on the machine. The display screen of the system lights up, and the opening machine picture appears on the TV.

3.2 Variety of system function. Carry out the basic settings. After setup, press OPEN/CLOSE and the disc tray will open automatically. Put a disc in, press OPEN/CLOSE to close the disc tray, and the machine will play automatically.

3.3 When the main machine is on, all functions can be operated with the keys on the remote control and the front panel.

3.4 In normal playback mode, press the STANDBY key on the remote control . The machine enters standby mode, and the time is displayed.

SYSTEM SETUP

- When you press SETUP key on the remote control,the setup menu will be displayed.

1. Within the setup menu, you can use UP, DOWN, LEFT and RIGHT buttons on the remote control to move the cursor, and then press the ENTER button to make your selection Press LEFT can return the previous menu.
2. To exit setup menu, you can press SETUP .

1. GENERAL SETUP PAGE

Setup TV screen format, video type and all DVD functions.

1. 1 TV DISPLAY

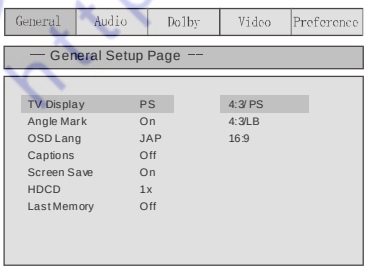

The TV Display which select the different ratio of display format and the screen of TV. There are various types of display on screen for different matches between Disc and TV .

Note:

- No matter which display format is selected, a picture recorded in standard 4:3 format always displays in the 4:3 aspect ratio.
- The display format of DVD titles may vary; please refer to the information that accompanies your specific DVD title.
- If the DVD title is recorded in 16:9 wide display format while the TV is a standard 4:3 screen, horizontal compression of the image will result.
- Some DVD titles may be recorded in special formats. In such cases, the DVD titles will always appear on the screen in their original format, regardless of which TV display format you select.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

1. 2 ANGLE MARK

ANGLE MARK: Users can select a particular camera angle when playing a DVD which offers multiple angles.

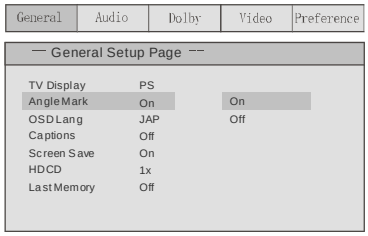

1. 3 OSD LANGUAGE

On Screen Display (OSD) Language: Users can select the whole setup menu and on-screen display language.

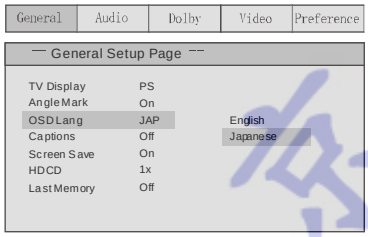

1. 4 CAPTIONS

CAPTIONS: For hearing-impaired people, the picture can be displayed with recorded explanatory captions. Note: It is valid for disc that has captions.

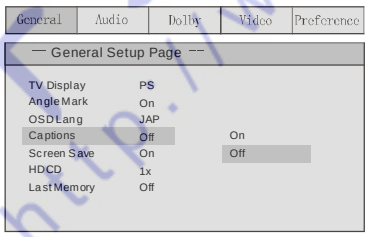

1.5 Screen Saver

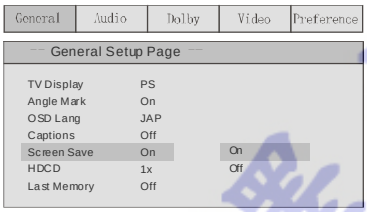

Screen Saver: When the unit is in stop mode, a moving picture will appear several minutes later if screen saver is set on. Screen saver will protect the TV screen.

1.6 HDCD

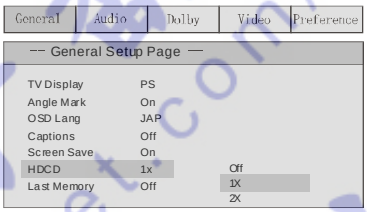

1.7 Last Memory

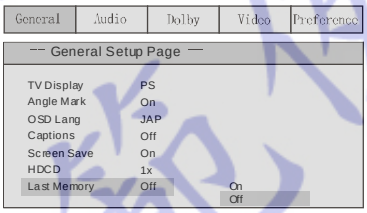

2. AUDIO SETUP PAGE

2.1 SPEAKER SETUP PAGE

DOWNMIX MODE: Sets front speakers to LT/RT, STEREO.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Down mix:
1 means LT/RT output
2 means STEREO output

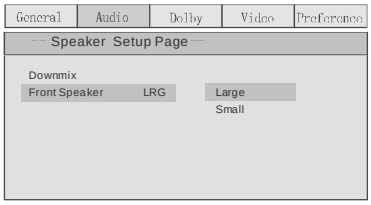

2.2 SPDIF OUTPUT

SPDIF OUTPUT MODE: Sets the audio outputs. Under the status of SPDIF/RAM, can not adjust volume of DVD, CD, can adjust only under MP3 format.

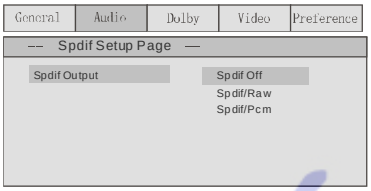

This DVD player includes three kinds of audio output:

1. SPDIF OFF: An analog surround sound format is output through the back-panel connections for 2-CH audio out.
2. SPDIF/RAW or SPDIF/PCM: This surround sound format is output to a Dolby digital decoder through the optical and coaxial connectors on the back-panel of the product.

3. DOLBY DIGITAL SETUP PAGE

3.1 DUAL MONO

DUAL MONO: If your amplifier/decoder has Dolby Digital output, you may select stereo, left mono, right mono, or mixed mono mode for your amplifier decoder.

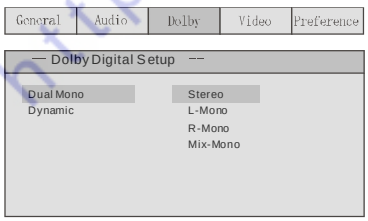

3.2 DYNAMIC

DYNAMIC: This function is generally used when playing high volume programs at night, in order not to disturb the neighbor. This setting can dynamically lower the volume and still keep the original tone quality. This is the range, measured in decibels (dB), between the loudest and the quietest sound registers in a sound track.

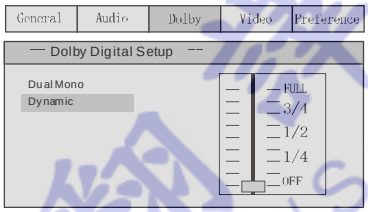

4. VIDEO SETUP PAGE

4.1 COMPONENT

COMPONENT: Sets the video output.

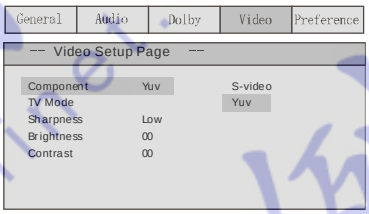

4.2 TV MODE SETUP PAGE

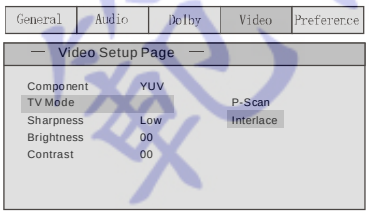

NOTE: The setup is working at YUV situation only.

4.3 SHARPNESS

SHARPNESS: Sets the sharpness level of video output.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

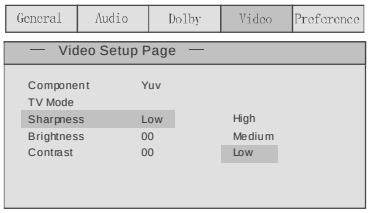

4.4 BRIGHTNESS

BRIGHTNESS: Sets the brightness level of video output.

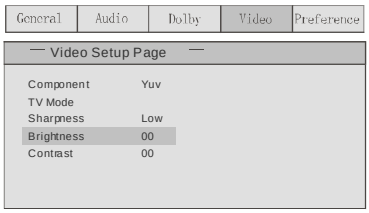

Press right button,the TV will display below.

Press LEFT/RIGHT button to adjust, then press ENTER button to confirm and return upon menu.

4.5 CONTRAST

CONTRAST: Sets the contrast level of Video output.

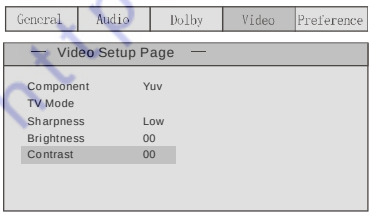

Press right button, the TV will display below.

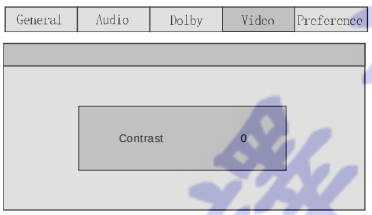

Press LEFT/RIGHT button to adjust, then press ENTER button to confirm and return upon menu.

5. PREFERENCE SETUP PAGE

The preference setting is active only when no disc. And the setting is effective on each time power on till exchanging the saved setting.

5.1 TV TYPE

TV TYPE: This player supports different TV output, including AUTO, NTSC, and PAL systems.

- If your TV support only NTSC or PAL and had you inadvertently selected the wrong TV type, the TV screen will become flickering and black-and-white. In this case, you should press the SETUP button to set as following Note.

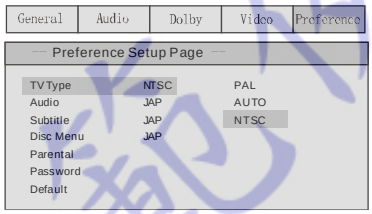

Note: How to Set the TV Type?

- You may switch the NTSC/PAL setting of the DVD player to match the video signal of your TV.
- The table below shows what kinds of disc are compatible with each setting (AUTO, PAL and NTSC)

Disc		Output Format		
Type	Format	Selected TV System Mode		
		NTSC	PAL	AUTO
DVD	NTSC	NTSC	PAL	NTSC
	PAL	------	PAL	PAL

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

5.2 AUDIO

AUDIO: Sets the preferred audio language as the default when playing DVD. (If DVD support these languages).

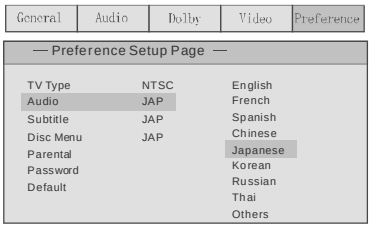

5.3 SUBTITLE

SUBTITLE: Sets the preferred subtitle language as the default when playing DVD. (If DVD support these languages)

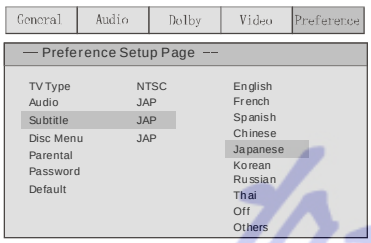

5.4 DISC MENU

DISC MENU: Sets the preferred menu language as the default when playing DVD. (If DVD support these languages)

5.5 PARENTAL

Parental: The parental control function works in conjunction with the different censorship classes assigned to DVDs. These classes help to control the types of DVDs that the family watches, There are up to 8 censorship classes for DVDs.

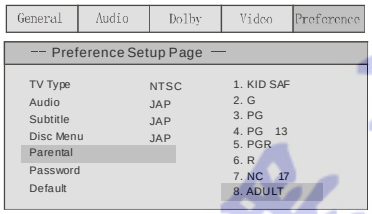

5.6 PASSWORD MODE

PASSWORD CHANGE: You can change the password: please type 4 numerals as new password.
Note: Be sure remember new password.

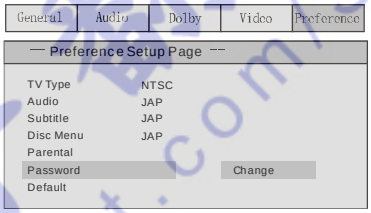

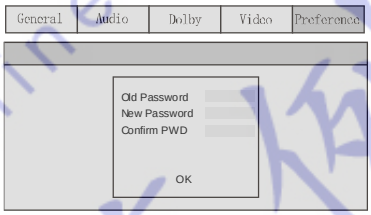

Note:
If you change this set, you must input password (Initial password : 9999).

5.7 DEFAULT

DEFAULT: Resets to all the manufacturer's original settings for this DVD player (except password), press ENTER to perform the reset.

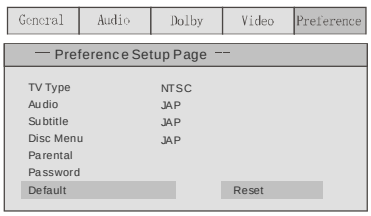

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

JPEG/MPEG-4/USB/CARD/AUX

About JPEG

The JPEG format adopts the most efficient compression which is widely used as reduce the size of pictures for storage. Even if pictures are compressed 15-20 times,the effect is still good. It is supported by most picture processing software, is suitable for picture storage, it contains a small amount of data and is easy to use.
The system can read JPEG format picture CD discs.

Displaying a picture

1. Insert the disc. The machine will begin to search disc information and the main menu will be displayed on the screen. You can choose to display this photo by pressing ENTER or by entering the photo number using the numeric keypad. You can also press PLAY key to play photo automatically. In playback mode, in order to move from photo to photo by press the previous/next track key, or moving from picture to picture by using the direction keys. Press the STOP key to return to the menu.

Other functions

1.When playing JPEG files, the system has "pause", "play"and "repeat" functions.

2.You can enlarge a picture by pressing the ZOOM key. Press the key continuously to obtain an enlargement (x2 x3 x4). Press the "zoom" key again to return to normal play mode.

3. When playing JPEG files, first press ZOOM key, then press ◂◂ / ▸▸ (quick forward/backward key) to enlarge a picture between 50% and 200%.

4. When the zoom is not activated, use the direction keys to rotate the image.

MPEG-4

MPEG 4 is a new multi-media standard which can record DVD-quality data onto CDs, whilst preserving image quality.

1.Put an MPEG-4 disc in the CD tray, press play key. The content will appear on the TV screen. You can now select the file of your choice with the direction key or the numeric keypad.

2.The above mentioned operation steps work when playing most MPEG-4 discs.

USB/CARD function

In DVD mode,

1) If there is no disc, the USB/CARD will play automatically when the USB/CARD is inserted.

2) Inserting the USB in the condition of disc playing situation, press the DVD/USB/CARD key once turns to USB playing, press it again turns to SD card playing, and turns to DVD disc playing by pressing at the third time.

Signal input(AUX) play

Befor turn on the machine, connect the outside signal to AUX input socket. PressINPUT key to enter AUX mode after turn on the machine, the machine begins to output the outside audio signal.

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

Trouble shooting guide /Technical specifications/Remarks

Common problems and their solutions

Because of the incorrect use, the machine may become damaged or may break. In these cases, please refer to the following solutions. If these are of no help, please refer to your retailer.

PROBLEM	PROBLEM CAUSE	REMEDY
No power display	Power plug not inserted properly; there is no power in the socket; the power is not switched on.	The jack must be electrical, press the plug,turn on the power.
No picture	Video line not properly connected; TV not properly set up; N/P is not selected correctly.	Connect the video output line correctly; set the TV into the AV channel; select a suitable mode (N/P).
Disc can not display	The standard of the disc is unsuitable; disc scratched /dirty; disc loaded upside down	Use suitable discs,make sure discs are clean; make sure discs are loaded correctly.
No sound	Audio line not properly connected; the volume is too low.	Connect the audio line correctly; adjust the volume.
Bad image definition and no colour	The quality of the disc is bad.	Use a better quality disc.

DVD video

Power supply	~100V/50-60 Hz	Signal mode	NTSC
Power	60W	Frequency	20Hz-20KHz±2.5db
N.W		S/N	>90db(1KHz)
G.W		Audio scope	>106db(1KHz)
Size		Conditions for use	Temperature: 5℃-35℃ Position: Horizontal

Output

Video output	1.0V(P-P) 75Ω	Digital audio output (BISTREAM/PCM COAXAL)	0.5V(P-P) 75Ω
S-VIDEO	(Y)1.0V(P-P) 75Ω (C)0.286V(P-P)75Ω	Audio output	2.0V(P-P)
Y/Cb/Cr output	(Y)1.0V(P-P) 75Ω (Pb)/(Pr) 0.7V(P-P)75Ω		

Remarks

NOTE:

***The quality of JPEG photos and the speed with which they can be opened depend on the resolution & the compression ratio of the photos.
Some JPEG photos may not be played due to disc quality and formats.
***Some DVD+R/RW, DVD-R/RW discs may not be played due to the quality or burning conditions.
***During using the machine, the machine might be wrong when it was disturbed or reading bad conditon discs.
Restarting the system could recover to normal condition.

If at any time in the future you should need to dispose of this product, please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.com.cn

WEIMAN

TV-8800

取　扱　説　明　書

~100V 50-60Hz 60W CE

京 翻譯社 http://www.tranlinet.com/Samples/ 京文翻譯例

カタログ/はじめに/アクセサリー

もくじ

はじめに ―― 1
アクセサリー ―― 1
主な特徴 ―― 1
各部の名前/インストール ―― 2-4
セーフティ/リモコン/ディスク ―― 5
iPod オペレーション ―― 6-7
リモート コントロール機能 ―― 8-10
パネル/バックボード イラストレーション ―― 11
システム接続イラストレーション ―― 12-13
システム セットアップ ―― 13-17
JPEG/MPEG-4/USB/カード/AUX ―― 18
トラブル処置ガイド/テクニカル仕様書/備考 ―― 19

はじめに

お客様へ
この度は、WEIMANコンポーネントプレーヤーをお買い上げいただきまして、まことにありがとうございました。この商品を安全に正しく使用していただくために、お使いになる前にこの取り扱い説明書をよくお読みになり十分に理解してください。お読みになったあとは、必要なときすぐに取り出せるように大切に保管してください。
ご使いの間、異常があるときは使用を中止し、弊社サービスセンターまでご連絡ください。

アクセサリー

以下の付属品がパッケージの中に入っているかどうかをお確かめください

1. リモコン

2. ユーザマニュアル

3. スピーカーケーブル

4. AVケーブル

5. iPodブラケット

6. 固定クリップ

7. ねじ

◆ このマニュアルの仕様はサンプルに従って作成したものです。ご参考ください。
◆ 仕様および外観は改良のため予告なく変更する場合があります。

主な特徴

＊ 本製品はDVD/CD/MP3/WMA/CD-R/CD-RW/MPGE4/USB/SD/MMCをサポートします。
＊ iPodオーディオ、ビデオ出力をサポートします。
＊ イメージCD読み込み、デジタルアルバムブラウズ機能をサポートします。
＊ マルチ見出し、スクリーン角度、画像の選択機能をサポートします。
＊ AC-3とHDCDデコーダを内臓します。
＊ 自動的なアップグレード、年齢認証ロック、自動スクリーンセーバ機能。
＊ デジタルビーム、同軸そしてミックスオーディオ(左/右)出力機能。
＊ カラオケ機能をサポートします。
＊ スタンバイの時間を設定できます。
＊ ニつサブウーファーチャンネルパワー出力(2*20W+40W RWS)

正しく安全にお使いいただくために、ご使用前に必ず取扱説明書をよくお読みください。
お読みになったあとは、大切に保管してください。

各部の名前 / インストール

本体(正面)

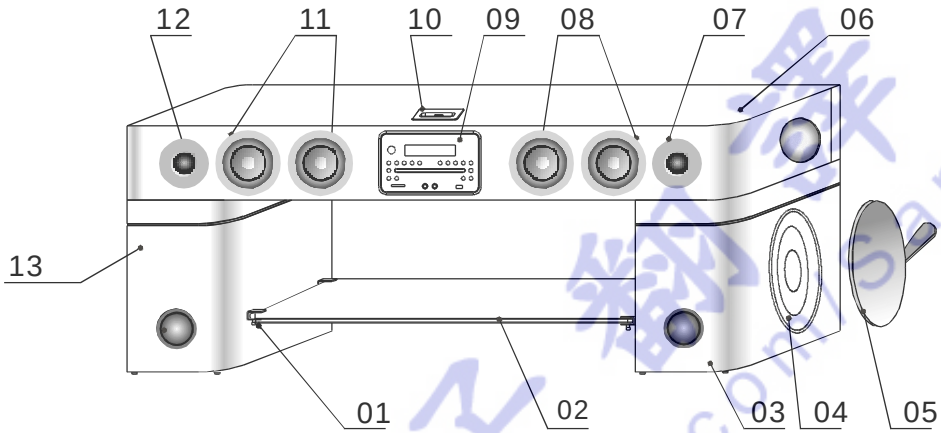

本体(背面)

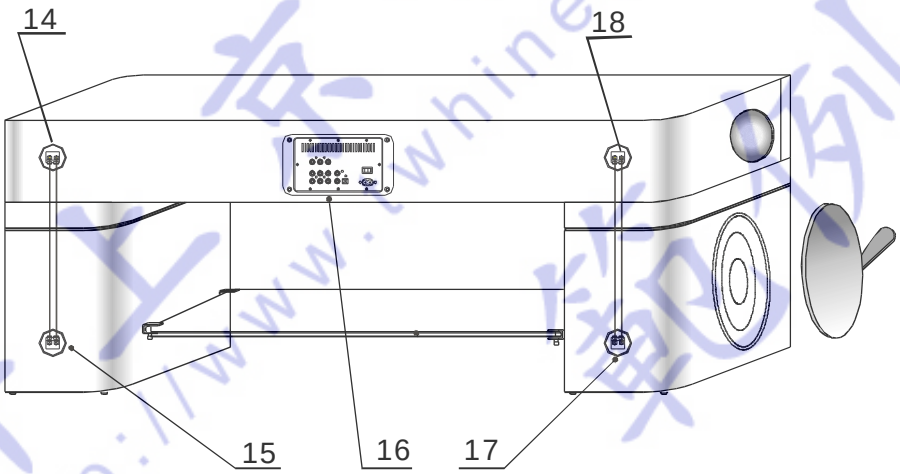

1. ガラスを固定するクリップ
2. ガラスボード
3. 右スピーカーボックス
4. バススピーカー
5. スピーカーカバー
6. 本体ボックス
7. 高音用スピーカー
8. 中音スピーカー
9. DVDパネル・ボード
10. iPodドック
11. 中音スピーカー
12. 高音用スピーカー
13. 左のスピーカーボックス
14. スピーカー出力端子
15. スピーカー入力端子
16. 背板
17. スピーカー入力端子
18. スピーカー出力端子

井上京子翻譯社 http://www.twhinet.com/samples/

各部の名前 / インストール

インストールステップ

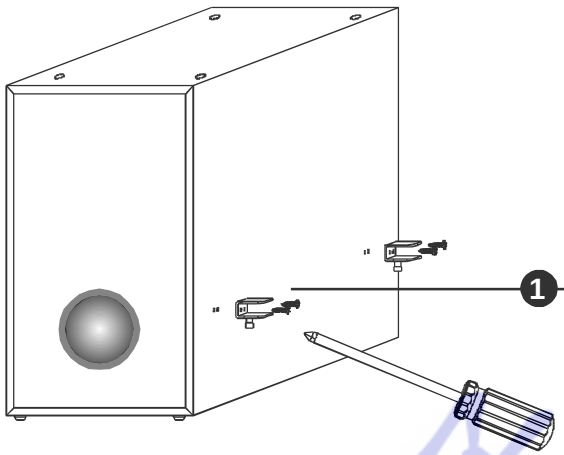

まず、左のスピーカーに適切に4つの穴にクリップを固定してからドライバーでねじを締めてください。

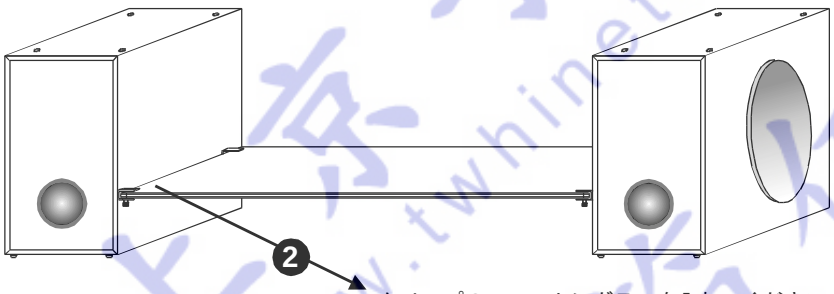

クリップのスロットにガラスを入れてください。

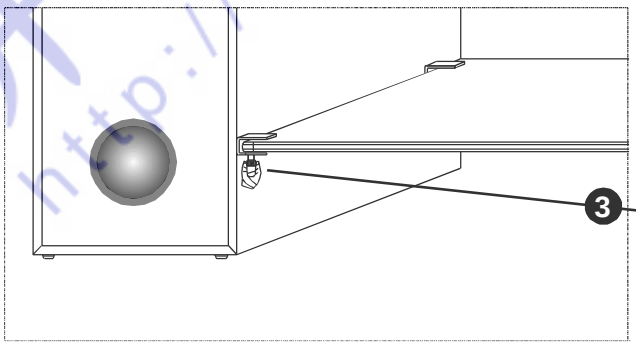

ドライバーを使用して適切に4個のねじをゆっくりとガラスを固定しながら締めてください。

各部の名前 / インストール

インストールステップ

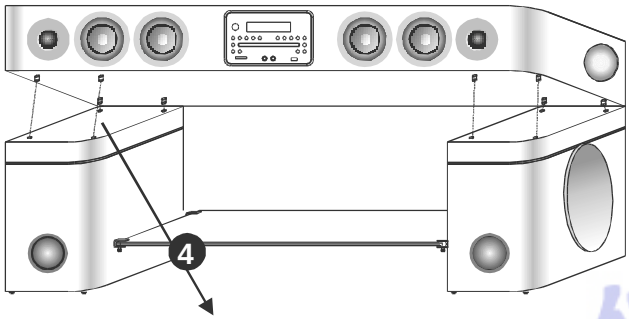

オリエンテーションポスト(本体の下にある)を4つの穴(左スピーカーの上)にセットしてください。

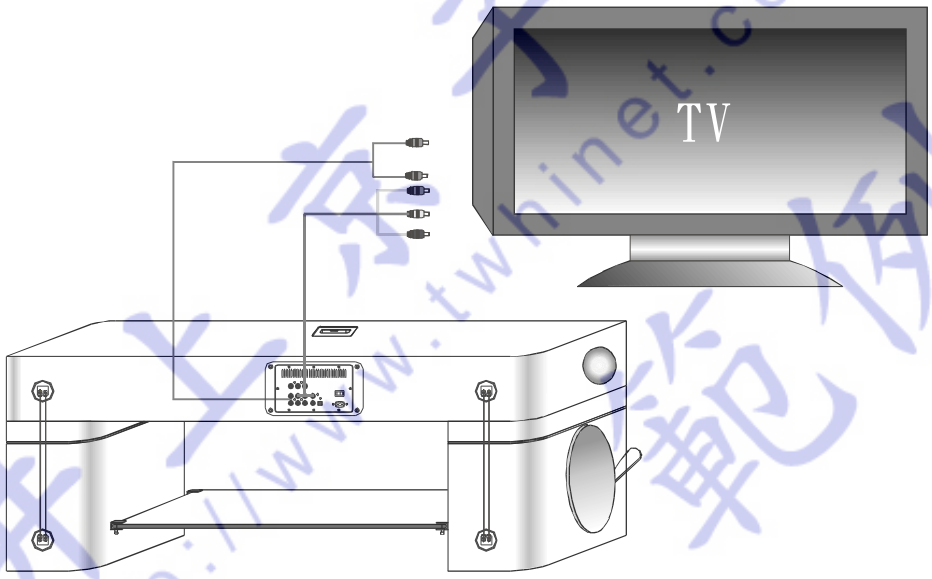

ご注意

1. なるべく本商品を操作便利、メンテナンスしやすい場所にバランスよく設置すること(不安定な場所に置かないこと)。
2. 震動、火災になりやすく湯気、湿気や湯気のあたる場所に絶対置かないこと。
3. 持ち運ぶときは、やさしく置くようにし、地面に落さないこと。

京華翻譯社 http://www.twhinet.com/samples/

iPod オペレーション

iPod 取扱使用書

１、”⏯”再生/一時停止ボタンです。これを３～５秒間押したままにすると、iPodはスタンバイモードに入ります。
もう一度ボタンを押すと再生します。
２、”■”停止ボタンです。
３、”⏮”と”⏭”スキップ/サーチボタンです。ボタンを２～３秒押したままにすると早送り/巻戻し機能になります。（または”▲”、”▼”ボタンを押しても早送り/巻戻し機能を選びます。）
４、”MENU”- ボタンを押した後には”◀◀ ▶▶”ボタンで選びたい機能を選択してから”ENTER”ボタンを押します。
５、”REPEAT”- 演奏中にこのボタンを押すとリピート機能が起動します。”🔂”マークはトラックリピートを意味します。”🔁”マークはすべてのトラックをリピートするという意味です。

iPodとメインユニットの オペレーション

このユニットは最もポピュラーでiPod ミニ、iPod nano ,iPod Photo, iPod ビデオなどのiPodモデルと互換性があり、iPodのバッテリー・チャージャとしてもご利用できます。
最大６個まで取り付けられるドックアダプターと共に使用できます。適切にiPodが確実にドックできるのを保証します。新しいiPodモデルのために、新たにドックアダプターを提供します。

ドックアダプターに挿入

ドックアダプターを選択してください。正しいドックアダプターを使用すると
iPodは確実にiPodにユニットと連携できます。

1. ユニットにゆっくりとiPodドックアダプターをドックに押し込んでください。
2. 慎重にiPodをドックに置いてください。

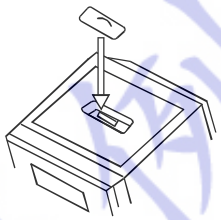

ドックアダプターから外す

最初にiPodを取り外し、次にドックアダプターをつかんでそっと
上向きに引いてください。

本体でiPodを操作します。

１、iPodボタンを押して、iPod文言が現れます。
２、音楽や写真やビデオなどを選択して、通常通りに接続してiPodを再生してください。
３、必要があれば、”⏮ / ◀◀”または”▶▶ / ⏭”Bボタンを押してスキップ又はサーチを選択できます。または再生や一時停止にしたい場合、” ▶/⏸ PLAY/PAUSE”を押してください。
４、VOLUME +/-ボタンを押すとお好みのサウンドレベルに調整できます。



ご注意: iPodを使って写真とビデオを楽しみたいとき、テレビに接続してください。

iPodの充電

ご注意: iPodに正しく差し込んで使用して確実にドックアダプターにドッキングされるのを確認してください。さもないと場合によってiPodへ損害をもたらすことがあります。iPodがシステムと確実にドッキングしたら充電が始まります。確実にドッキングしていないと、iPodは充電されないので注意してください。

iPod アダプター インフォメーション

このシステムは６つ違う種類のアダプターステーションと「ドッキング可能」なように設計しています。各種類のiPdoモードによって適切なアダプターを選択して、そしてiPodと接続の前にそのアダプターをドッキングステーションに挿入してください。以下の一覧表をご参照ください。ご注意：iPods NANO、2GB および4GBのアダプターは提供しません。お買いになるときの付属のアダプターを使用してください。
このシステムは適切にこドッキングステーションに収まるでしょう。
また、私たちはフラットーつを付属し、iPodが長時間にシステムとドッキングステーションしない場合、ほこりをカバーするとこができます。

アダプター ＼ iPod® バージョン ／ iPod 容量	nano		3G				mini		photo				5G	
	1 GB	4 GB	10 GB	15 GB	30 GB	40 GB	4 GB	6 GB	20 GB	30 GB	40 GB	60 GB	30 GB	60 GB
4G iPod® (20 GB) iPod® photo (20/30 GB) 3G iPod® (10/15 GB)			●						●					
3G iPod® (30/40 GB) 4G iPod® (40 GB)					●									
iPod® photo (40/60 GB)											●		＊	
iPod® mini							●							
iPod® nano	●													
ほこり除けカバー	「長時間ドッキングしない場合、ほこりカバーをドッキングステーションに取り付けてください。													

井上翻訳社 http://www.inet.com/samples/ 翻訳例

リモート コントロール機能

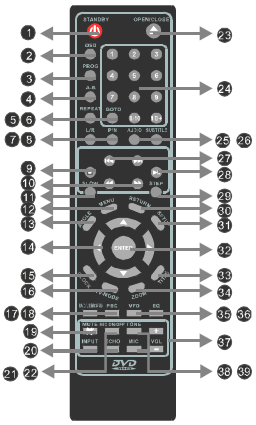

1. スタンバイ
2. OSD
3. プログラム
4. A-B 繰り返し
5. リピート
6. ジャンプ
7. L/R
8. P/N
9. ストップ
10. 巻戻し/早送り
11. スロー
12. メニュー
13. アングル
14. 指示 キー
15. クラック
16. テレビモード
17. DVD/USB/カード
18. PBC
19. ミュート
20. 入力
21. マイク オン/オフ
22. エコー選択
23. オープン/クローズ
24. ニューメリック キー
25. オーディオ
26. サブタイトル
27. スキップ/サーチ
28. 再生/一時停止
29. ステップ
30. リターン
31. セットアップ
32. 選択
33. タイトル
34. ズーム
35. VFD
36. EQ
37. 音量 +/-
38. トーン
39. マイクロフォン ボリューム

1 スタンバイ

マシンを使用していないとき、エネルギーを節約するためにこのキーを押してください。

2 OSD スクリーンディスプレイ

OSDキーを押してください、そしてスクリーンは現在の状況、時間、残っている時間、および他の機能を示します。

3 プログラム

PROGを押すとプログラムメニューがスクリーンに表示されます。本体マシンは20のトラック(CD/VCD)又はチャプター(DVD)のシリーズをプログラムできます。PROGメニューを入力した後にカーソルがNo.1場所にあり、トラック(CD/VCD)又はチャプター(DVD)番号の入力は数値キー(0-9)を押すことによって自由に動かします。 次に、カーソルをNo.2の場所に動かて決定を押してください、そして操作は同じく繰り返します。操作に誤りがあったとき、またはプログラムの選択を変えたいとき、カーソルを修正したい場所に動かしてください。設定したあと、" STAR" キーを押すとプログラムが再生します。

MP3/MP4/JPEGファイルを使うときには、PROGキーを押し、モードに表示されたファイルを選ぶことができる:フォルダー、ファイルリスト。

4 A-Bリピート

A-B リピート機能は即時に気に入ったポイントAから設定するBまで繰り返しリピートすることができます。
1. 繰り返したい始まりポイントに、このキーを一回押してください。
2. 繰り返したい終わりポイントに再びキーを押してリピート機能がスターします。
3. A-Bリピート機能が稼動しているうち、もう一度このキーを押すと、リピート機能は取り消されます。

5 リピート

再生するとき、REPEATキーが押するとトラックが繰り返しに再生します。もう一度REPEATキーを押せば、全体のプログラムが繰り返されます。

6 GOTO

GOTO ボタンでを使用して選択した場所に移ることができます。GOTOボタンを押した後に、キーパッドを使用してトラック、タイトル、章の番号を入力しますか、または再生を始めたい場所に正確な時間、数分、および秒を入力してください。

DVD	TT	01/04 CH	019/ 20	00:00:00
CD	TRK	08/18		00:00:00

リモート コントロール機能

７ L/R

ディスクを演奏するときにはこのボタンを押して、ステレオ/左/右のスピーカ出力が選べます。

８ P/N-モード選択

このキーを押して PAL、NTSCあるいはAUTOを選択してください。

９ストップ

一般的な再生状態ではこのボタンを押すとストップモードに入り、そしてテレビスクリーンはスタートロゴを表示します。ディスクの種類によってプレーヤーは停止したシーンから元位置を復元することができ、完全にストップするには２回STOPキーを押してください。

１０ 巻戻し/早送り

このキーを押して再生（音なし）のスピードは５種類（２X、４X、８X、１６X、３２X）から選ぶことができます。標準の再生スピードに戻すときは、PAUSEキーを押してください。

１１ スロー

DVD/VCDディスクが再生するとき、このキーを押すと、スピードを 1/2、1/4、1/8、1/16 から指定できます。標準の再生スピードに戻すときは、PAUSEキーを押してください。

１２ メニュー

DVDモードのとき、このキーを押せば、スクリーンはメインメニューを表示します。方向キーを使ってプログラムを選び、確認することができます。

１３ アングル

DVDディスクによってに異なる角度でプログラムを楽しむことができます。角度を選択するときこのキーを使用してください。

１４ 指示キー(上/下/左/右)

それらのキーを押して、サブタイトル/メニュー/セットアップ などのプログラムか項目を選択することができます。

１５ クラック

スタンバイの状態に、このキーを使用して時間を調整することができます。

１６ テレビモード

DVD再生の間、このキーを押せば、オプションの中からS-ビデオ、YUVモードを選ぶことができます。

１７ DVD/UCD/カード

DVDモードのとき、DVD/USB/CARDキーを押すことによってDVD/USB/CARDモードに切り替えることができます。５～１０秒以降自動的に再生するごとに変わります。

１８ PCB

再生中にこのキーを押すと、より高度なディスクのVCD1.1のPBCメニューがスクリーンの上に表示され、上と下の方向キー生モードを選ぶことができます。もう一度該当キーを押すとPBCモードから解除されます。

１９ ミュート

再生中にミュートキーを押すと、オーディオ出力を中止し、もう一度該当キーを押すと解除されます。

２０ 入力

このキーを押すと、入力を変更し”DVD/補助の/iPod”モードから選ぶことができます。

２１ マイク オン/オフ

このキーを押すと、マイクロホンをオン/オフに切り替えることができます。

２２ エコー

マイクがオンの状態においてこの”vol +/-”キーを押してカラオケエコー効果を調整することができます。

リモート コントロール機能

２３ オープン/クローズ
このキーを押すとCDトレーを開けたり閉じたりすることができます。
ご注意: 1、ディスクが印刷された面を上に向けてセットしてください。トレーが閉じたあと、自動的に再生するようになっています。
2、ディスクを再生するとき、このキーを押すとレーザがリセットされ１０秒後CDトレーが開きます。

２４ ニューメリック キー(０～９)
０～９の数字キーを押すと、直接に１０までの番組を選ぶことができます。１０番以上のプログラムを選びたいときに１０+キーを押してからあとの数字キーを続けて入力してください。

２５ オーディオ
このキーを押すとオーディオモードに切り替えます。

２６ サブタイトル
本製品はマルチ言語をサポートしています。このキーを繰り返し押しながら言語を選択してください。

２７ スキップ/サーチ
ディスクが再生する間、このキーを押すと次または前へとプログラムがジャンプします。

２８ 再生/一時停止
再生中には、このキーを押すと一時停止になり、もう一度押すとプログラムが再生します。

２９ ステップ
このキーを押すと、映像が連続放送するのではなく１つシーンごとに再生することになります。

３０ リターン
再生するときには、このキーを押すと、タイトルメニューに戻ります。

３１ セットアップ
このキーを押すと、セットアップ、オーディオセットアップ、ドルビーセットアップ、ビデオセットアップ、おパフォーマンスセットアップ選択メニューに入ります。
セットアップ使用上のご注意：
再生する間、”SETUP”キーを押して、スクリーンはメニューを表示し方向キーを使ってナビゲートしセットアップしてください。セットアップが終わり、メニューを離れるときもう一度”SETUP”を押してください。
ご注意:また、再生していないときでもセットアップはできます。

３２ 選択
このキーを押すと、現在のスクリーンにおける選択したメニューを決定します。

３３ タイトル
DVDモードになっているとき、このキーを押すとタイトルメニューに戻ることになります。

３４ ズーム
DVD又はVCDが再生するとき、このキーを押すと画像が２X、３X、４X倍のズームに変わります。

３５ VFD
スクリーン上下のバランスを調整するとき、このキーを押してください。

３６ EQ
スイッチオンになったあとにはEQキーを押すと”ジャズ、クラシック、ラック、ポップス、EQ オフ”からバランスが選べます。

３７ 音量 +/-
音量を調節するとき、このキーを押してください。

３８ トーン
このキーを押すと、”BASS、Treble、Subwoofer”の音声モードから選べます。このキーで ”vol「+/-」”音量を調整してください。

３９ マイクロフォン ボリューム
このキーを押すと、”マイクオン/オフ”の状態が切り替えることができます。このキーでマイクロホンボリュームを調整してください。

パネル/背板イラスト

パネル機能イラスト

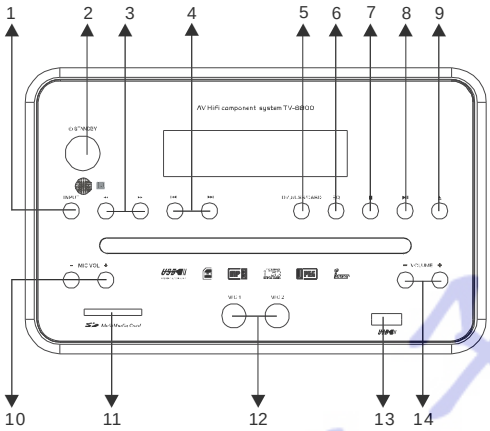

1.INPUT	チャンネル変換
2.⏻STANDBY	スタンバイ
3. ◂◂ ▸▸	巻戻し/早送り
4. ⏮ ⏭	スキップ/サーチ
5.DVD/USB/CARD	DVD/USB/カード
6.EQ	EQバランスモード
7. ■	ストップ
8. ⏯	再生/一時停止
9. ⏏	トレーオープン/クローズ
10.- MIC VOL +	マイクロホンボリューム
11. SD MultiMedia Card	SD/MMC/カードスロート
12.MIC	マイクロホンソケット
13. USB	USB入力
14.- VOLUME+	メインボリューム調整

バックボード機能イラスト

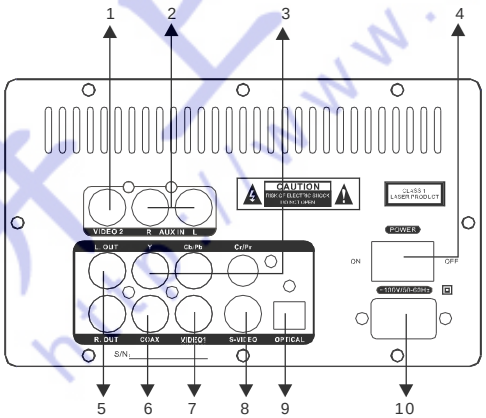

1 VIDEO 2	DVD＆iPodビデオ出力端子
2 R AUX IN L	AUX入力端子
3 Y Cb/Pb Cr/Pr	コンポーネットビデオ出力端子
4 POWER ON/OFF	電源 オン/オフ
5 L. OUT R. OUT	左/右MIXオーディオ出力端子
6 COAX	同軸デジタルオーディオ出力端子
7 VIDEO	DVDビデオ出力端子
8 S-VIDEO	S-ビデオ出力端子
9 OPTICAL	光デジタルオーディオ出力端子
10 ~100V/50-60Hz	電源入力

北京翰林雅阁 www.twhinet.com/samples/

システム接続イラストレーション

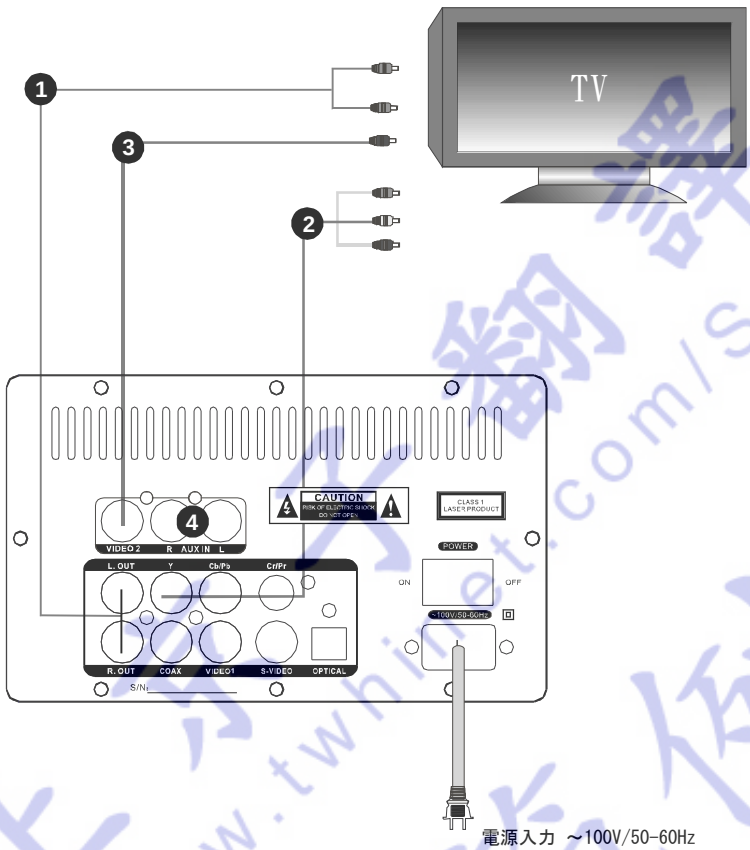

1. 音声信号入力端子に接続してください。（オーディオ、赤/白）
2. コンポーネント(Y, Cb/Pb, Cr/Pr)をビデオ入力端子に接続してください。
3. DVDビデオシグナル入力端子に接続してください。
4. AUX 入力端子。

警告：テレビのすぐ近くにスピーカーを置かないでください、少なくとも20センチ以上離してスピーカーを設置してください。

システム接続イラストレーション

１．テレビと接続します

1.1 テレビにVIDEO入力端子(黄色端子)しかついていない場合、ビデオケーブルを使用して本体VIDEO出力端子からテレビのVIDEO入力端子に接続してください。
1.2 テレビにS-ビデオ端子がついている場合、S-ビデオケーブルを使用して本体S-ビデオ端子からテレビのS-VIDEO入力端子に接続してください。ビデオ出力をS-ビデオモードに選択すると映像がきれいに写ります。

1.3 テレビに”Y、Cb、Cr”といったコンポーネント入力端子がついている場合、コンポーネントケーブルを使用して本体コンポーネント出力端子からテレビに接続してください。本体におけるビデオ出力モードをコンポーネント出力モードに切り替えてください。
1.4 本体のオーディオ出力端子からオーディオケーブルを使用してテレビに音声入力の左右端子に接続すると、オーディオがテレビのスピーカーに出力できます。

２．テレビとアンプ

左右スピーカーとの接続
スピーカーケーブルを使用して本体左右オーディオ端子からスピーカーアンプ左右入力端子に接続してステレオ音楽を楽しんでください。

３．オペレーション ステップ

3.1 上記イラストレーション指示の通りシステムを接続してください。
テレビのスイッチをつけて テレビのチャンネルをAVに調整してください、そして本体のSTANDBYボタンを押し、ディスプレイにライトが灯ると、テレビに本体の画像が表示されます。
3.2 まず、基本の設定を行ってください。セットアップが終わった後、”OPEN/CLOSE”キーを押すと、ディスクトレーが自動的に開きます。ディスクを入れてもう一度”OPEN/CLOSE”キーを押してトレーが閉じると自動的に再生します。
3.3 本体は電源が入るとすべての機能をリモコンおよびフロントパネルから操作できます。
3.4 正常な再生モードではリモコンを使って”STANDBY”キーを押すと本体がスタンバイモードに入ります。またディスプレイに時間を表示されます。

システム セットアップ

リモートコントローラを使って”SETUP”キーを押すと、セットアップメニューが表示されます。
1. セットアップメニューの中では、リモコンの上下左右ボタンでカーソルを動かして項目を選択してENTERボタンを押し決定することができます。

2. セットアップメニューを出すにはもう一度”SETUP”キーを押してください。

1. GENERAL SETUP PAGE

テレビスクリーンの種類、ビデオタイプ、およびDVD機能をセットアップします。

1.1 TV DISPLAY

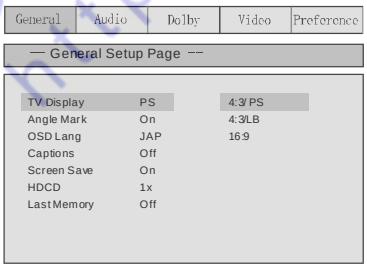

テレビが本体システムビデオ出力の表示形式と異なった場合、あらかじめスクリーン比率を選択します。
Discとテレビの間には、スクリーンにおけるディスプレイが様々に異なるタイプがあります。

ご注意：

● どの本体システム出力表示フォーマットを選んでも、画像は4:3アスペクトレシオで標準の4:3という比例に表示します。

● DVDタイトルのシステム出力表示フォーマットは異なることがあります。特定のDVDタイトルに伴う情報を参照してください。

● DVDタイトルはテレビが標準4:3スクリーンを設定するとき、16:9の広い出力表示フォーマットにて記録されると、イメージは水平的に圧縮されます。

● いくつかのDVDタイトルが特別な形式に記録されるかもしれません。そのような場合、テレビのシステム出力表示フォーマット設定にかかわらず、DVDタイトルはスクリーンに元の形式に表示されます。

1. 2 ANGLE MARK

アングル マーク：複数のアングルをサポートするDVDを再生するとき、ユーザは特定のカメラアングルを選択できます。

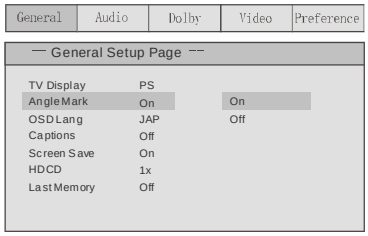

1. 3 OSD LANGUAGE

スクリーン上(OSD)言語表示：ユーザはスクリーンに表示される全てのセットアップメニューの言語を選択できます。

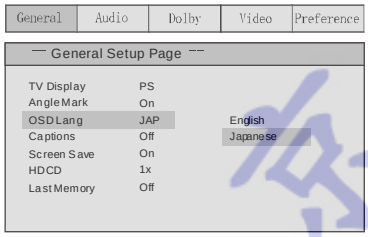

1. 4 CAPTIONS

字幕：聴覚障害の人々に対して説明の字幕と共に絵を表示することができます。
ご注意：字幕機能がついているディスクにのみ有効です。

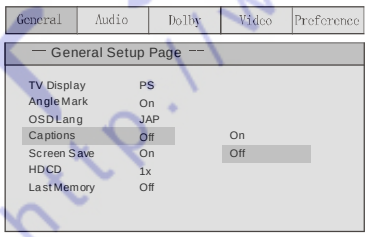

1.5 Screen Saver

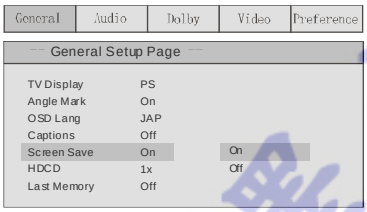

スクリーンセーバー：スクリーンセーバをセットしたとき、ユニットがストップモードに入るか、または画像が表示したまま数分経つとスクリーンセーバーがスタートします。スクリーンセーバーはテレビスクリーンを保護します。

1.6 HDCD

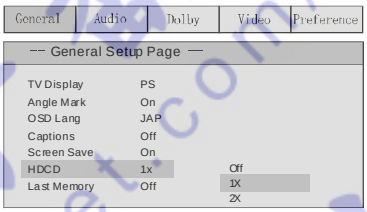

1.7 Last Memory

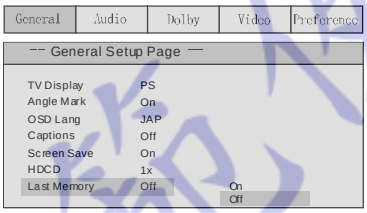

2. AUDIO SETUP PAGE

2.1 SPEAKER SETUP PAGE

DOWNMIXモード：フロントスピーカーのLT/RTステレオをセットします。

ダウン ミックス:
LT/RT 出力方法
STEREO 出力方法

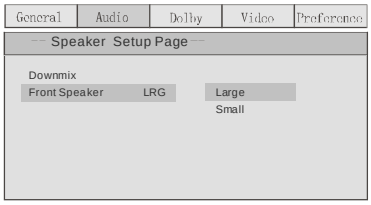

2.2 SPDIF OUTPUT

PDIF出力モード: オーディオ出力をセットします。SPDIF/RAMの状態のDVDまたはCDはボリュームを調整できません。MP3以下のフォーマットはボリューム調整が可能です。

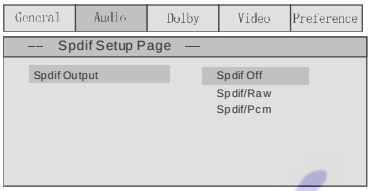

このDVDプレーヤーは3種類のオーディオ出力をサポートします。
1. SPDIF オフ: アナログサロン音声フォーマットは、2-チャンネルオーディオのためのバックパネル接続で出力されます。
2. SPDIF/RAW、SPDIF/PCM: ドルビーデジタルまたはDTS で記録されたDVDを再生したときは、ビットストリーム信号を出力します。リニアPCMで記録されたディスクを再生したときは、リニアPCM信号を出力します。

3. DOLBY DIGITAL SETUP PAGE

3.1 DUAL MONO

デュアルモノ: 二系統の増幅回路が収納された一台のアンプすなわちステレオアンプの二つの入力に同じ信号を入力し、それを二つの増幅系で増幅します。

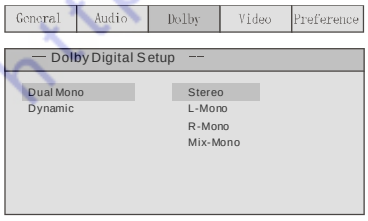

3.2 DYNAMIC

ダイナミック: サウンド機器が歪みなしで再生することのできる最大限の音量と、各機器固有の「ノイズ フロア」の比率です。このタイプの歪みは「クリッピング」とも呼ばれ、高周波の可聴クラッキングノイズを指します。

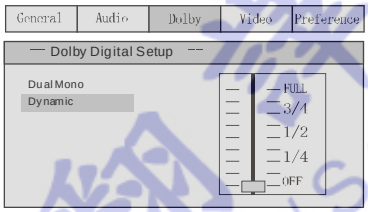

4. VIDEO SETUP PAGE

4.1 COMPONENT

コンポーネント: ビデオ出力するセットです。

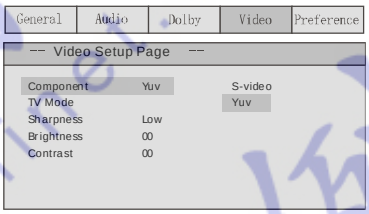

4.2 TV MODE SETUP PAGE

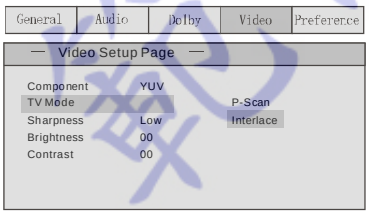

ご注意: セットアップはYUV状況だけで有効になります。

4.3 SHARPNESS

シャープ: ビデオ出力の鋭さレベルを設定します。

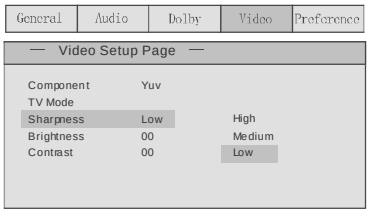

4.4 BRIGHTNESS

明るさ：ビデオ出力の明るさレベルを設定します。

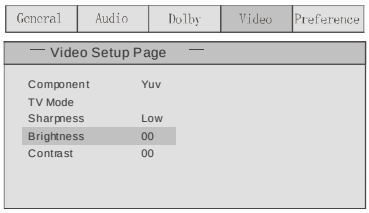

右ボタンを押すとテレビの下に表示されます。

”LEFT /RIGHT”ボタンを押して適切に調整してください。調整が終わったらENTERボタンで決定してメニューへリターンします。

4.5 CONTRAST

コントラスト：ビデオ出力のコントラストレベルを設定します。

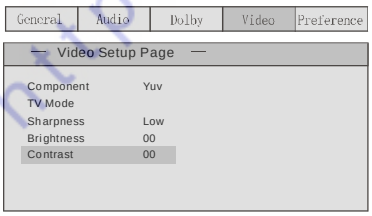

右ボタンを押すとテレビの下に表示されます。

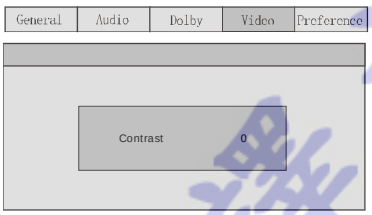

”LEFT /RIGHT”ボタンを押して適応に調整してください。調整が終わりENTERボタンで決定してメニューへリターンします。

5. PREFERENCE SETUP PAGE

ディスクが入っていないときのパフォーマンス設定が可能です。そしてこの設定は電源がオフになっても次回の設定まで有効です。

5.1 TV TYPE

テレビのタイプ：このプレーヤーはAUTO、NTSC、およびPALシステムのテレビ出力をサポートします。
● テレビはNTSCとPALだけをサポートし、テレビタイプを間違って選択すると画面がちらついたり、白黒画面になることがあります。この場合、注意に従って
”SETUP’ボタンを押してセットしなおしてください。

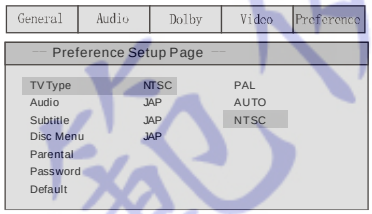

ご注意： テレビのタイプをどういう風に設定しますか
● テレビに対するDVDプレーヤーのNTSC/PAL信号を合わせるように設定します。

● 下におけるテーブルはどんな種類のディスクがそれぞれテレビシステムコードとコンパチブルー覧表です。(AUTO、PAL、NTSC)

Disc		Output Format		
Type	Format	Selected TV System Mode		
		NTSC	PAL	AUTO
DVD	NTSC	NTSC	PAL	NTSC
	PAL	------	PAL	PAL

5.2 AUDIO

オーディオ: DVDを再生するとき、デフォルトとしてオーディオに相応しい言語を設定します。(DVD内容が該当言語をサポートすることを前提条件とします)。

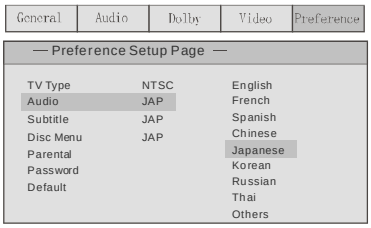

5.3 SUBTITLE

サブタイトル: DVDを再生するとき、デフォルトとしてDVD字幕に相応しい言語を選んでください。(DVD内容が該当言語をサポートすることを前提条件とします)。

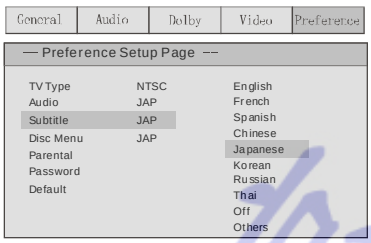

5.4 DISC MENU

ディスクメニュー: DVDを再生するとき、デフォルトとして相応しい言語を選んでください。(DVD内容が該当言語をサポートすることを前提条件とします)。

5.5 PARENTAL

ペアレンタル: ペアレンタルコントロール機能はDVDやインターネット、携帯電話などの電子メディアにおいて、性的表現や暴力的表現など子どもに悪影響を及ぼす可能性のあるサービスやコンテンツに対して、親が視聴・利用制限をかけること。

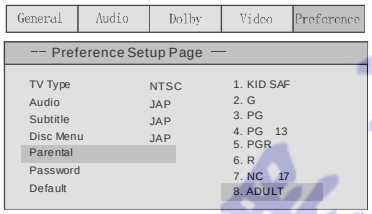

5.6 PASSWORD MODE

パスワードモード: パスワードを変更することができます。新しいパスワードに4つの数字を入力してください。 ご注意: 新しいパスワードは思い出せる数字を使用してください。

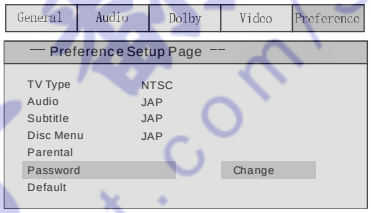

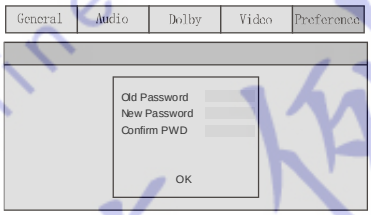

ご注意:
もしセッティングしたい場合、パスワードを入力する必要があります。(イニシャル パスワード: 9999)。

5.7 DEFAULT

デフォルト: すべての設定を工場出荷デフォルト設定にリセットします。(パスワードはリセットされません。)”ENTER”を押すとリセットが執行されます。

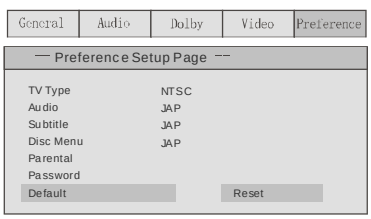

JPEG/MPEG-X4/USB/カード/AUX

JPEGに関して

JPEGフォーマットは現在非常によく使用され、ストレージのために画像サイズを小さくする最も効率的な圧縮を採用します。画像が１５～２０回圧縮されても画質は良く保てます。画像がストレージに適して少量のデータを含んでいるということにより、ほとんどの画像処理ソフトウェアがサポートします。本体システムはJPEGフォーマット画像CDディスクを読むことができます。

画像を表示します

１、ディスクを挿入すると本体システムはディスクのインフォーメーションをサーチし、スクリーンにメインメニューを表示します。
リモコンの数値キーパッドを使用し”ENTER”キーで画像を選ぶかまたは写真番号を入れることによって写真を表示することができます。また、”PLAY”キーを押すと自動的に写真を再生します。再生モードにおいて写真と写真の間を方向キーで動かすことができます。メニューに戻すとき”STOP”を押してください。

その他の機能

１、JPEGファイルを再生するときシステムには”一時停止”、”再生’、”リピート”の３つの機能があります。２、”ZOOM”キーを押すことによって画像を拡大することができます。つづけて押すとより拡大(x2 x3 x4)した画像を得ることができます。正常な再生モードに戻るにはもう一度”ZOOM”キーを押してください。
３、JPEGファイルを再生するとき、”ZOOM”キーを押してから”◂◂/▸▸”(早送り/早戻し)を押すと50%から200%の間、画像がズームされます。
4, ズームがかかっていないときには、矢印キーを使用して画像を回転することができます。

GMPE -4

MPEF-4は画質をDVD品質データのようにCDに記録できる新しいマルチメディア規格です。

1, MPEG-4ディスクをCDトレーに入れて再生キーを押してください。コンテンツはテレビスクリーンに表示されます。方向キーか数値キーパッドでファイルを選択できます。
2, ほとんどのMPEG-4ディスクを再生するとき、上記の操作ステップは利用できます。

USB/カード機能

DVDモードにて

１、ディスクがトレーに入っていないとき、USB/カードを挿入すると自動的に再生します。
２、ディスクが再生する状況の中でUSBを挿入し、”DVD/USB/カード”キーを押すと一度USB再生します。もう一度押すとSD再生するモードに変わり、３回目に押すとDVDディスクを再生します。

信号出力(AUX)再生

本体に電源をいれる前、AUX入力端子に信号を接続しておいてください。”INPUT”キーを押しAUXモードに切り替えたあと、電源をオンにして本体は外部へ音声信号を出力し始めます。

トラブル処置ガイド/テクニカル仕様書/備考

共通のトラブルとそれぞれの処置方法

操作を誤っていてもなかなか気がつかず、故障と思われがちですが、
修理にお持ちになる前にもう一度次の点をお確かめください。それでも異常のある場合は、
電源プラグをコンセントから抜いて、お買い上げの販売店に修理をご依頼ください。
お客様による修理は危険ですから絶対におやめください。

症状	原因	処置方法
電源表示がない	電源コードが正確に挿入されていません；コンセント自体には電源がありません；電源スイッチが入っていません；	電源コードをコンセントにしっかりと差し込んで電源スイッチをオンにしてください。
映像が出ない	ビデオ回線が適切に接続されていません；テレビが適切にセットアップされていません； N/Pが正しく選択されていません。	正確にビデオ出力回線を接続してください。 AVチャンネルにテレビを設定してください。 適当なモード(N/P)を選択してください。
ディスクが再生できない	ディスクの規格が不適当です；ディスクが汚れているか傷がついています；ディスクが逆さにロードされました。	適当なディスクを使用してください。ディスクを清潔にしてください。ディスクを正しくロードしてください。
音がでない	音声回線が正確に接続されていません；ボリュームの設定が低過ぎます；	音声回線を正確につなげてください。ボリュームを大きく調節してください。
画像がぼける・色がない	ディスクの品質が悪いです。	より良質のディスクを使用してください。

DVD ビデオ

電源	~100V/50-60 Hz	信号モード	NTSC
消費電力	60W	周波数	20Hz-20KHz±2.5db
N.W		S/N	＞90db(1KHz)
G.W		オーディオ範囲	＞106db(1KHz)
サイズ		使用環境	温度：5℃-35℃ 位置：水平面

出力

ビデオ出力	1.0V(P-P)75Ω	デジタル音声出力 (BISTREAM/PCM COAXAL)	0.5V(P-P) 75Ω
S-ビデオ	(Y)1.0V(P-P)75Ω (C)0.286V(P-P)75Ω	Audio output	2.0V(P-P)
コンポーネント出力	(Y)1.0V(P-P)75Ω (Pb)/(Pr) 0.7V(P-P)75Ω		

備考

*** JPEG画像品質と展開するスピードはファイルの圧縮率に依存します。
いくつかのJPEG写真はディスクの品質およびフォーマットが違うために再生できないことがあります。
*** いくらかのDVD+R/RW、DVD-R/RWは品質が悪くいい状態ではないため、再生できないことがあります。
*** 破損したディスクを読み込んだか、予測できないエラーが発生するとき、本体システムが正常に機能できないことがあります。この場合、一度電源をオフにし再開すれば正常に回復できます。

将来、この電気製品を処分する必要があるとき、この消費電子商品は家庭ごみとして処分してはいけません。必ずリサイクル施設に出してください。なお、リサイクルに関するアドバイスは現地管理機関又は小売業者に問い合わせてください。(WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT DIRECTIVE)